


# **installation** instructions


Fitting Press Panels to  
0.82 / 0.98 / 1.18m WC Frames

The following fitting instructions cover all Press Panels and heights of frame.

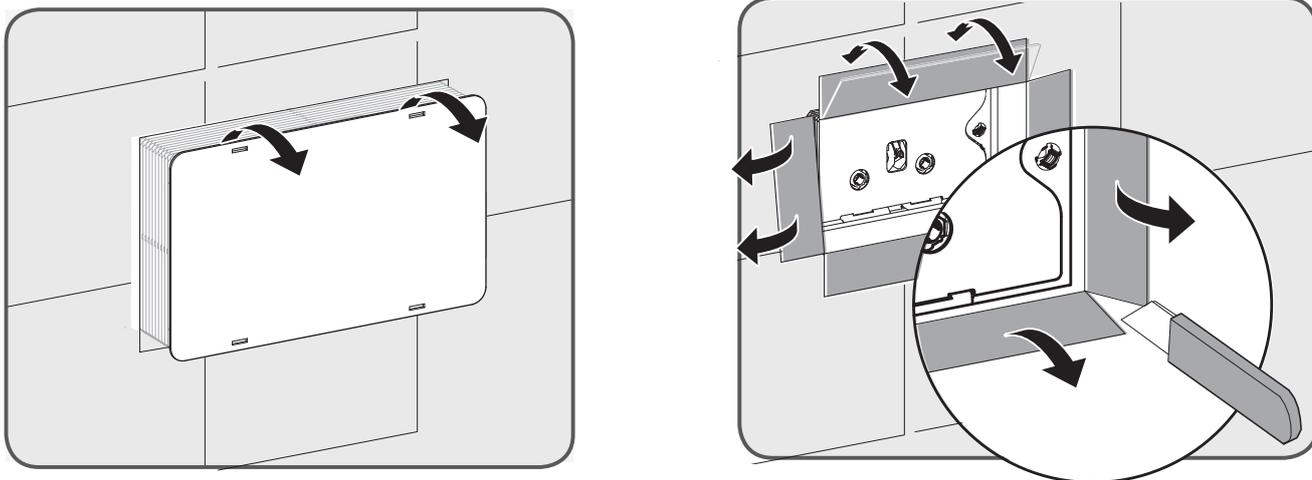


**Step 1**

Discard the blanking plate from Corrugated Tile Guide & Flush Plate Mount and cut down the Corrugated Tile Guide & Flush Plate Mount so that it is flush with the tile using a Retractable Blade Knife.

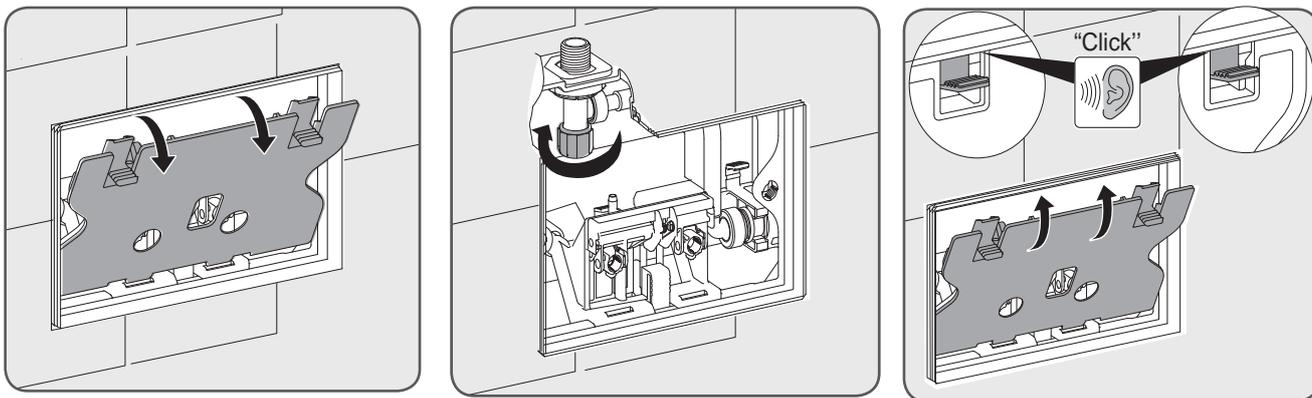



**Step 2**

Remove the cover plate. At this stage you can now activate the water supply to the frame at the isolation valve within the cistern either by hand or with a flat bladed screwdriver. Replace the cover plate. Ensure that it clicks back into place.

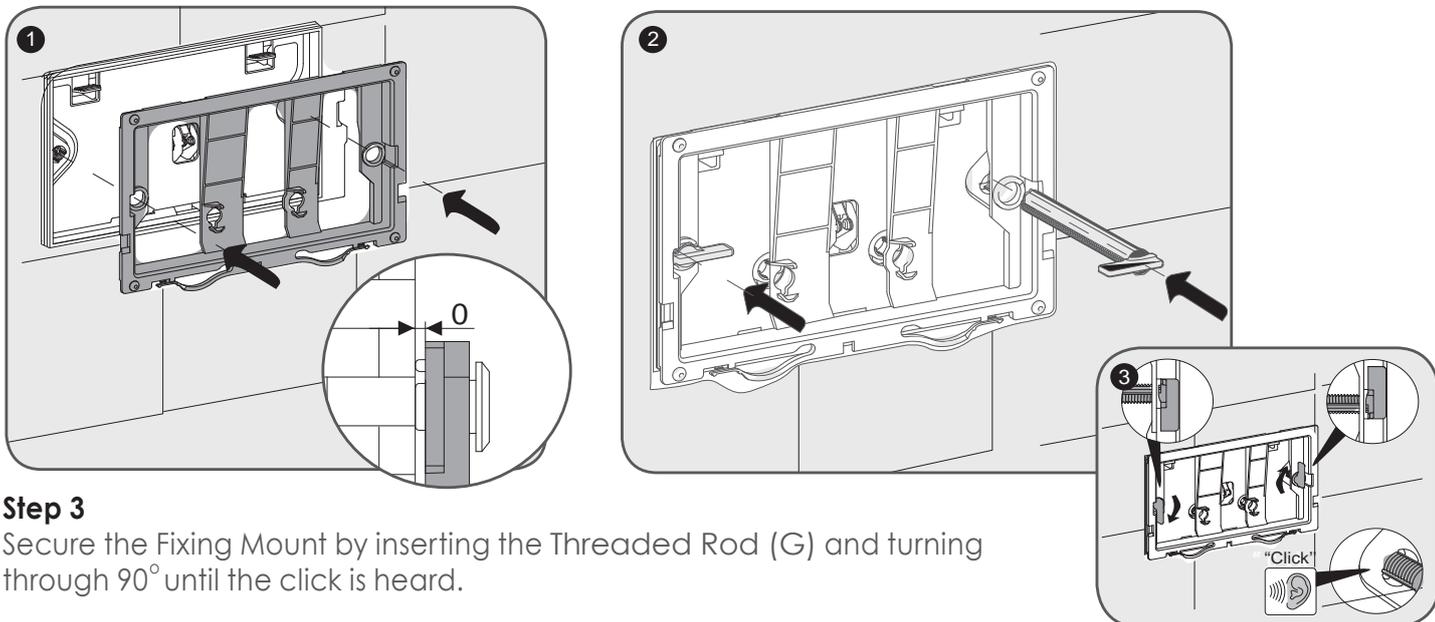


**Step 3**

Secure the Fixing Mount by inserting the Threaded Rod (G) and turning through 90° until the click is heard.

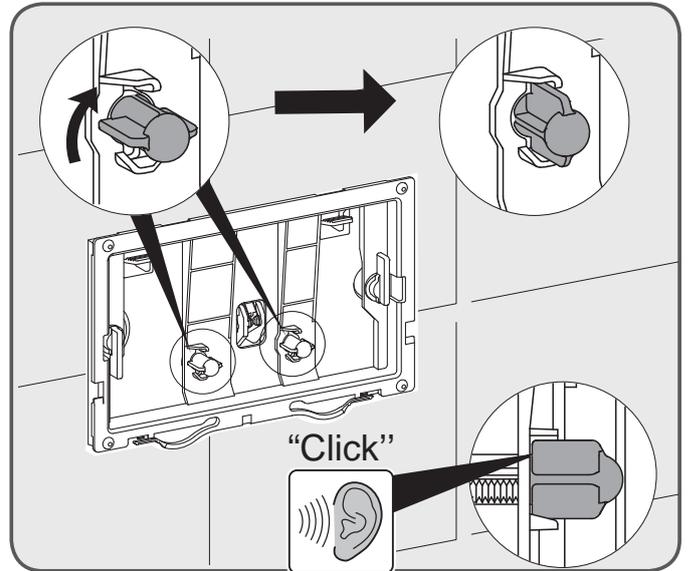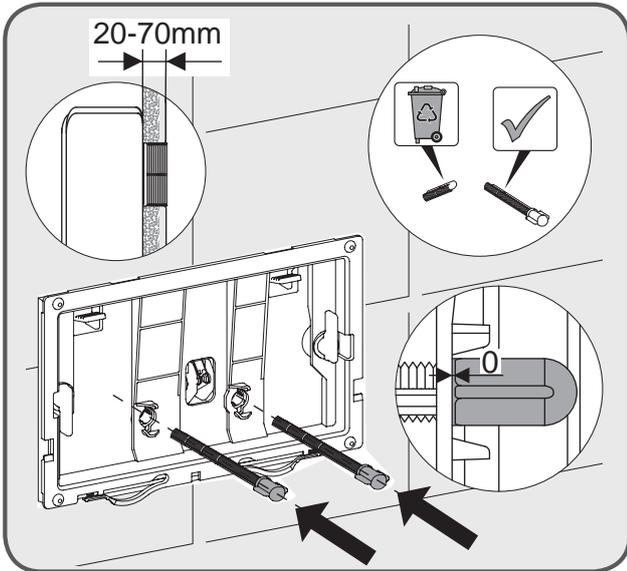


**Step 4**

Insert the Flush Push Rods fully un turn through 90° until the click is heard.

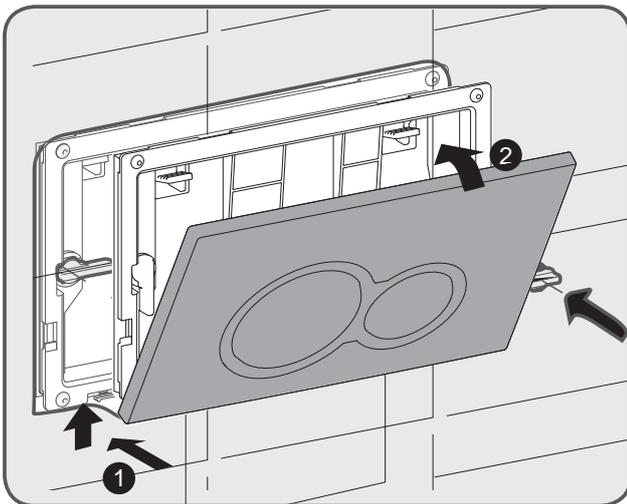

**Clip located at the bottom**

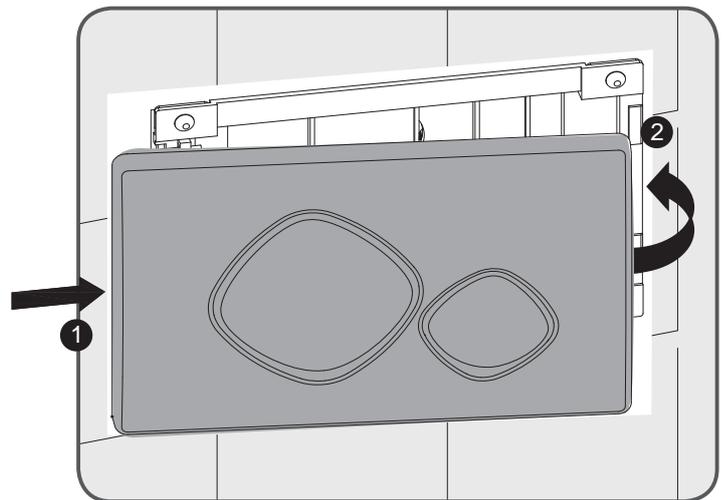

**Clip located to the left hand side**

**Step 5**

Hook the Press Panel over the Fixing Mount for Cistern and push gently so that it clips and holds in position. Depending on the fixing mount, the spring clip may be located on the base of the mount (as shown in these instructions) or to the left hand side; see images above for further details on how to clip the Press Panel in place.

**If you require any assistance or advice  
please contact your merchant.**